



Beaux-Artes



410-867-0790 / 301-855-4244 fax 410-867-8004 1012 South Creek View Churchton, MD 29733

Layout & Installation



for

Beaux-Artes Louis XIV Architectural Wall Panels


style	part #	inset
Louis XIV Corner	AP-302 L/R	4-3/8" short side, 8-5/8" long side
Louis XIV Headpiece	AP-302 C	14-1/4" inset (7-1/8" from center)

Insets are the amount of space used by the panel corner. Molding should be cut to fit between inset marks. Check style for inset size in the adjacent chart

The greatest amount of build time should be spent determining the panel layout. Once complete you can draw your panel rectangle on the wall with a light pencil. Then measure and mark your corner insets. Insets are the amount of space that the decorative corners take up without molding underneath.

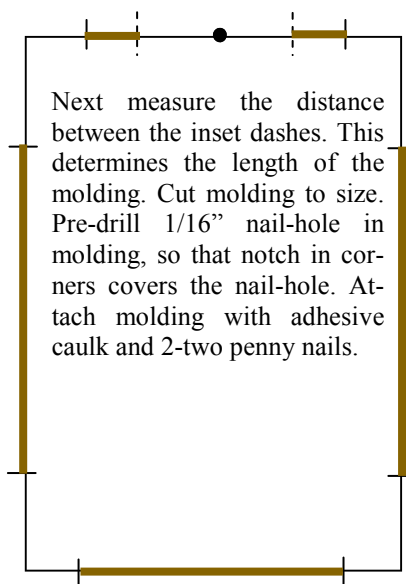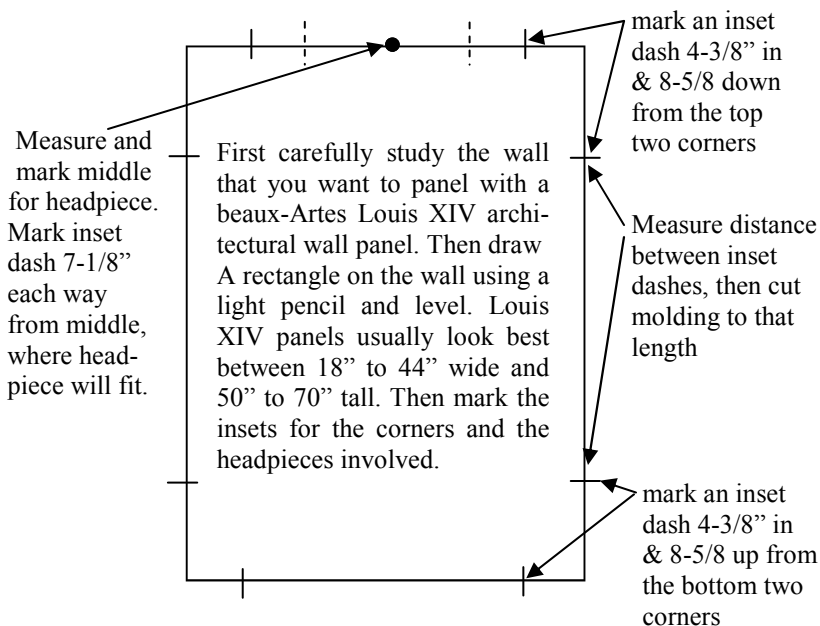

Please read the installation instructions for all Beaux-Artes wall panels before attempting to install Louis XIV panels. Those instructions have a lot of necessary information and tips.

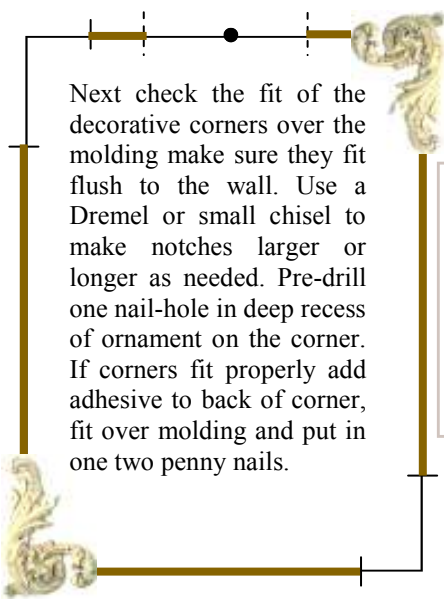

- Tools Required
- 1) Measuring Tape
 - 2) Rags
 - 3) Hammer
 - 4) 1 1/4" Finishing Nails
 - 5) Miter Saw
 - 6) Caulk Gun
 - 7) Level
 - 8) Electric Drill
 - 9) 1/16" Drill Bit

